

FOUR SEASONS™

FS200 MANUAL



Read and save these instructions
Lesen und behalten Sie diese Anleitung
Lisez et enregistrez ces instructions
Leggere e salvare queste istruzioni
Lea y guarde estas instrucciones
Прочтите и сохраните эти инструкции
阅读并保存这些说明



DE Beachten Sie unbedingt alle Sicherheitshinweise (separat im Lieferumfang enthalten).

EN Always observe all safety notes (included separately in delivery).

FR Veuillez respecter impérativement l'ensemble des consignes de sécurité (fournies séparément dans le contenu de la livraison).

IT È indispensabile osservare tutte le indicazioni sulla sicurezza (contenute separatamente nel volume di fornitura).

NL Lees alle veiligheidsinstructies (afzonderlijk in de levering).

ES Tenga en cuenta siempre todas las indicaciones de seguridad (se suministran aparte junto con el producto).

PT Respeite sempre todas as notas de segurança (incluídas separadamente no fornecimento).

HU Feltétlenül ügyeljen az összes biztonsági útmutatóra (a szállítási terjedelem külön tartalmazza).

PL Należy koniecznie przestrzegać wszystkich wskazówek bezpieczeństwa (zawartych osobno w zakresie dostawy).

SE Följ alltid alla säkerhetsanvisningar (bifogas separat i leveransen).

FI Noudata ehdottomasti kaikkia turvallisuusohjeita (sisältyvät erillisenä osana toimituslaajuuteen).

DK Overhold altid alle sikkerhedsanvisninger (medfølger separat).



NO Alle sikkerhetsanvisningene (følger med separat) må følges strengt.

LV Obligāti ievērojiet visus drošības norādījumus (atsevišķi iekļauti piegādes komplektā).

LT Būtinai atsižvelkite į saugumo nurodymus (atskirai pridėti komplektacijoje).

EE Järgige tingimata kõiki ohutusjuhised (sisalduvad tarnekomplektis eraldi).

CZ Bezpodmínečně dodržujte všechny bezpečnostní pokyny (samostatně součástí dodávky).

SK Bezpodmienečne dodržiavajte všetky bezpečnostné pokyny (samostatná súčasť dodávky).

SI Obvezno upoštevajte varnostna navodila (vključena v obseg dobave kot ločen dokument).

HR Obavezno obratite pozornost na sve sigurnosne napomene (odvojeno se nalaze u opsegu isporuke).

GR Τηρείτε πάντα όλες τις οδηγίες ασφαλείας (περιλαμβάνονται ξεχωριστά στο παραδιδόμενο υλικό).

RU Изучите все указания по технике безопасности (входят в комплект поставки).

CN 务必注意所有安全规章 (在供货范围中单独提供)。

DE	Gebrauchsanweisung	5
EN	Instructions for use	17
FR	Mode d'emploi	29
IT	Istruzioni per l'uso	41
NL	Gebruiksaanwijzing	53
ES	Instrucciones de uso	65
PT	Instruções de utilização	77
HU	Használati útmutató	89
PL	Instrukcja obsługi	101
SE	Bruksanvisning	113
FI	Käyttöohje	125
DK	Brugsanvisning	137

NO	Bruksanvisning	149
LV	Lietošanas instrukcija	161
LT	Naudojimo instrukcijos	173
EE	Kasutusjuhend	185
CZ	Návod k použití	197
SK	Návod na používanie	209
SI	Navodila za uporabo	221
HR	Upute za uporabu	233
GR	Οδηγίες χρήσης	245
RU	Руководство по эксплуатации	257
CN	使用说明书	269

INSTRUCTIONS FOR USE

TABLE OF CONTENTS

Technical data	19
Product features	20
Product overview	21
Assembly and use	22
Preparing for operation	22
Reset heater	22
Using the Four Seasons™	23
Replacing the filter	24
Replacement filter – FS200F	24
Cleaning and maintenance	25
Cleaning the humidifier wick frame	25
Cleaning the water tank	26
Storage	26
Trouble shooting	27

TECHNICAL DATA

Technical data*

Type designation	FS200
Power consumption	2000 W
Power supply voltage	220–240 V ~ 50 Hz
Capacity of Humidification	347 g/h
Volume of air flow	136 m ³ /h at high setting
Dimensions	230 x 260 x 650 mm
Weight	5.2 kg

* Subject to change

WELCOME

Congratulations on your purchase of the Four Seasons™ combination “heater” / “humidifier” / “air purifier” / “fan”! This amazing product combines all the benefits and comforts of a space heater, a humidifier, an air purifier and fan into one space-saving and money-saving product. You'll soon agree that the Four Seasons™ is one product you can't live without!

Please be sure to read the following instructions carefully to ensure optimal performance and safety.

envion.com

 
PRODUCT FEATURES

- Durable, washable cloth wick
- LED low water level indicator light
- 3 independent controls settings (Heater, Humidifier + Fan, Heater + Humidifier)
- 3 fan speed settings and 3 heating power levels (LOW / MEDIUM / HIGH)
- Self-regulating PTC heater and over-heat protection
- Evaporative humidification eliminates the issue of “white powder”
- Tip-over sensor for smart automatic shutoff control for the whole unit
- Empty water sensor for smart automatic power shutoff for the humidifier
- Filter effectively removes, smoke, pollen, dust, animal dander, dust mites from the air




PRODUCT OVERVIEW

- | | |
|----------------------------|-------------------------|
| 1. Control panel | 10. Refill light |
| 2. Humidifier water sensor | 11. Heater + Humidifier |
| 3. Humidifier wick frame | 12. Humidifier + Fan |
| 4. Wick frame release tab | 13. Heater only |
| 5. Water tank | 14. Function knob |
| 6. Cover frame | 15. Power button |
| 7. Humidifier wick | 16. Heater knob |
| 8. Air outlet grill | 17. Filter |
| 9. Fan speed switch | |

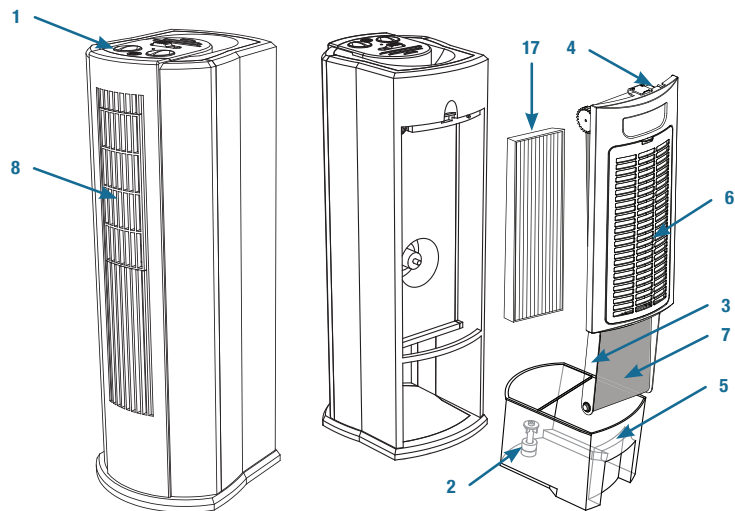

CONTROL PANEL

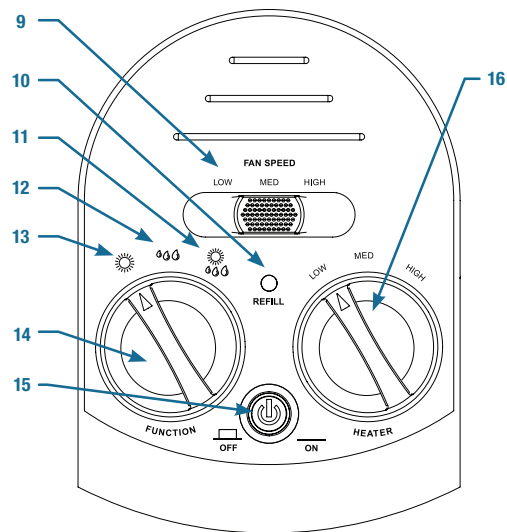 

ASSEMBLY AND USE

PREPARING FOR OPERATION

 Unplug the Four Seasons™ unit prior to filling the tank with water.

1. Open the packing box and take out the Four Seasons™ unit.
2. Turn the unit upright for operation.
3. To remove the humidifier wick frame, press the release tab and pivot the frame outwards and then lift it out of the unit. See Figure 1.

 You must remove the wick frame before you can remove the tank.

4. Remove the tank by sliding it out of the unit (see Figure 2).
5. Fill the water tank with clean water to maximum water level marking on tank.

 Do not overfill the tank. Use extreme caution to ensure that water is poured only into the water tank and that the rest of the unit stays dry. Never plug in the unit if it gets wet.

6. After filling, put the tank back into the main body and replace the humidifier wick frame.

RESET HEATER

 This heater is equipped with a temperature limiting thermostat. If the unit should sense an overheat condition, the element will stop heating. It can only resume operation when user manual reset the unit.

Unplug the unit and wait 10 minutes for the unit to cool down, then plug unit back and follow the “Using the Four Seasons™” instruction described in this manual.

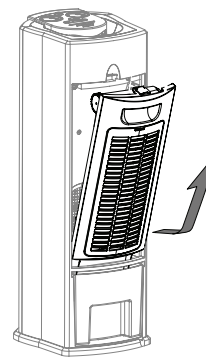 


FIGURE 1

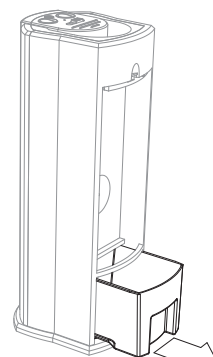 



FIGURE 2

USING THE FOUR SEASONS™

1. Plug the unit into an electrical outlet and press the power button to turn on your Four Seasons™ unit.
2. Turn the mode knob to select the desired function. You may choose to use either the heater, the humidifier, or the heater and humidifier together.

i No matter which mode you select, the air purifier feature will always be active.

 3. Once you have chosen the mode you can control how much air passes through your Four Seasons™ unit by sliding the fan speed button to low, medium or high as you prefer.
4. When you select either the heater mode or the heater + humidifier mode you may control the amount of heat your Four Seasons™ produces. Choose low, medium or high heat output.

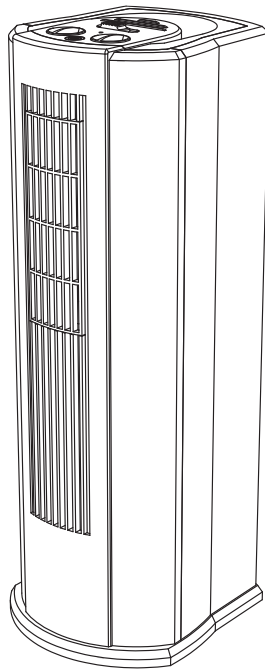

REPLACING THE FILTER

REPLACEMENT FILTER – FS200F

1. Make sure the unit is turned off and unplugged. To remove the cover frame, press the release tab and pull the frame outwards (see Figure 3A/B).
2. Remove the filter by pulling the filter out from the unit (see Figure 4).
3. Insert a new filter, then place cover frame back into position.

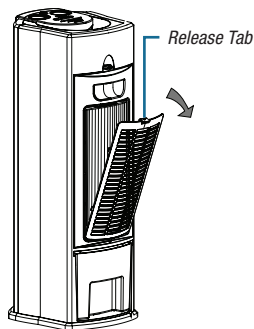 


FIGURE 3A

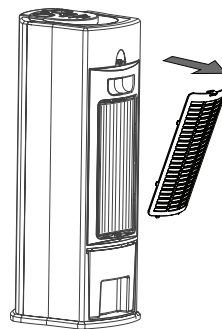 


FIGURE 3B

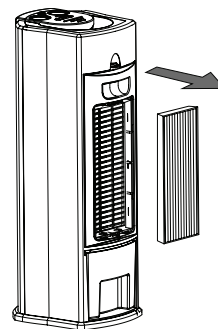 


FIGURE 4

CLEANING AND MAINTENANCE

CLEANING THE HUMIDIFIER WICK FRAME



Always unplug the Four Seasons™ unit prior to cleaning or other maintenance.

1. Remove the humidifier wick frame as explained in the “Assembly and use” section of this manual.
2. With the humidifier wick frame lying in front of you, gently bend each side of the wick frame to release the bottom roller (see Figure 5).
3. Release the top roller from the frame by carefully bending back the frame bracket and removing the roller axle from the bracket hole (see Figure 6). Remove wick from rollers.
4. To clean the wick you may wash it in your washing machine on a gentle cycle or use a mild detergent to wash by hand. Rinse with clean water. Be sure it is completely dry before reinserting.
5. Reinsert the humidifier wick into the rollers and then insert the humidifier wick frame into the unit.

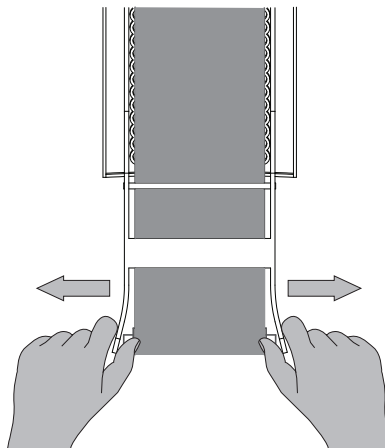 


FIGURE 5

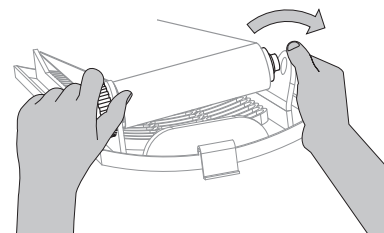 


FIGURE 6

 
CLEANING THE WATER TANK

1. Remove the humidifier wick frame as shown previously.
2. Remove the water tank as demonstrated earlier in this manual. Clean the tank with water and mild detergent.
3. Rinse thoroughly with clean water before reinstalling. Hand wash only.

STORAGE

Loop the cord around 15–20 cm and wrap with a cord tie. Place the unit in the original box and store in a cool, dry place.

 Any servicing other than as described in this manual should be performed by an authorized service representative. Do not wash the tank in the dishwasher.

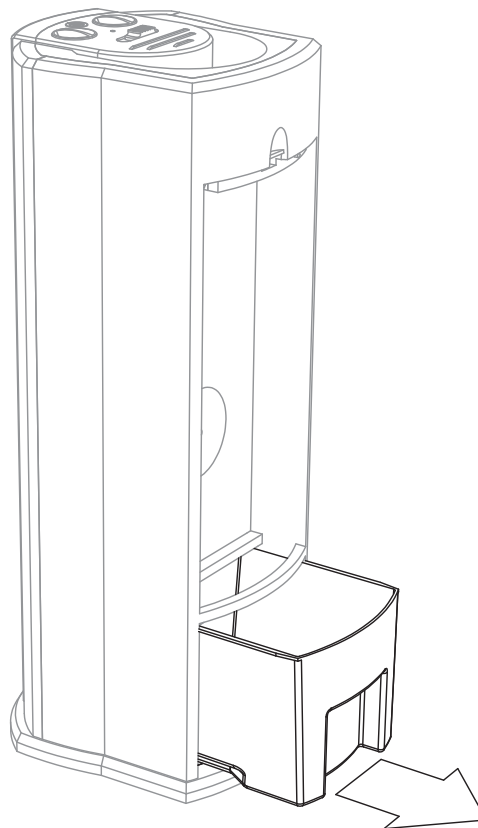

TROUBLE SHOOTING

If you are having problems with your Four Seasons™, please refer to the following suggestions.

My Four Seasons™ unit will not operate

Suggestions	Make sure the power button is pressed and in the down position.
	Make sure the unit is plugged into a functioning power outlet.
	Verify the wick frame and the inlet grill are properly installed.

My Four Seasons™ unit is not blowing as much air as it used to

Suggestions	Verify that the fan speed is set correctly.
	Verify that nothing is blocking the air inlet grill or outlet grill.

My Four Seasons™ unit's humidifier feature isn't working

Suggestions	Verify there is water in the tank.
	Verify the humidifier water sensor is floating in the water after filling tank.
	Make sure that the water tank is fully inserted.

ENVION
healthy home

envion.com

ENVION is a registered trademark of BONECO AG, Switzerland

BONECO AG, Espenstrasse 85, 9443 Widnau, Switzerland